

Model 691A50/01 BNC Termination Enclosure Installation and Operating Manual

For assistance with the operation of this product, contact PCB Piezotronics, Inc.

Toll-free: 800-959-4464 24-hour SensorLine: 716-684-0001 Fax: 716-684-3823

E-mail: imi@pcb.com Web: www.imi-sensors.com







Service, Repair, and Return Policies and Instructions

The information contained in this document supersedes all similar information that may be found elsewhere in this manual.

Service - Due to the sophisticated nature of the sensors and associated instrumentation provided bγ Piezotronics, user servicing or repair is not recommended and, if attempted, may void the factory warranty. Routine maintenance, such as the cleaning of electrical connectors, housings, and mounting surfaces with solutions and techniques that will not harm the physical material of construction, is acceptable. Caution should be observed to ensure that liquids are not permitted to migrate into devices that are not hermetically sealed. Such devices should only be wiped with a dampened cloth and never submerged or have liquids poured upon them.

Repair – In the event that equipment becomes damaged or ceases to operate, arrangements should be made to return the equipment to PCB Piezotronics for repair. User servicing or repair is not recommended and, if attempted, may void the factory warranty.

Calibration – Routine calibration of sensors and associated instrumentation is recommended as this helps build confidence in measurement accuracy and acquired data. Equipment calibration cycles typically are established by the users own quality regimen. When in doubt about a calibration cycle, a good "rule of thumb" is to recalibrate on an annual basis. It is

also good practice to recalibrate after exposure to any severe temperature extreme, shock, load, or other environmental influence, or prior to any critical test.

PCB Piezotronics maintains an ISO-9001 certified metrology laboratory and offers calibration services, which are accredited by A2LA to ISO/IEC 17025, with full traceability to SI through N.I.S.T. In addition to the normally supplied calibration, special testing is also available, such as: sensitivity at elevated or cryogenic temperatures, phase response, extended high or low frequency response, extended range, testing, hydrostatic leak pressure testing, and others. For information on standard recalibration services special testing, contact your local PCB Piezotronics distributor. sales or factory representative. customer service representative.

Returning **Equipment** – Following these procedures will ensure that your returned materials are handled in the expedient Before most manner. returnina any equipment to PCB Piezotronics, contact your local distributor, sales representative, or factory customer service representative to obtain a Return Warranty, Service, Repair, and Return Policies and Instructions Materials Authorization (RMA) Number. This RMA number should be clearly marked on the outside of all package(s) and on the packing

list(s) accompanying the shipment. A detailed account of the nature of the problem(s) being experienced with the equipment should also be included inside the package(s) containing any returned materials.

A Purchase Order, included with the returned materials, will expedite the turn-around of serviced equipment. It is recommended to include authorization on the Purchase Order for PCB to proceed with any repairs, as long as they do not exceed 50% of the replacement cost of the returned item(s). PCB will provide a price quotation or replacement recommendation for any item whose repair costs would exceed 50% of replacement cost, or any item that is not economically feasible to repair. For routine calibration services. the Order Purchase should include authorization to proceed and return at current pricing, which can be obtained a factory customer service representative.

Contact Information – International customers should direct all inquiries to their local distributor or sales office. A

complete list of distributors and offices found at www.pcb.com. be Customers within the United States may contact their local sales representative or factory customer а representative. A complete list of sales representatives can be found at www.pcb.com. Toll-free telephone numbers for a factory customer service representative. in the division responsible for this product, can be found on the title page at the front of this manual. Our ship to address and general contact numbers are:

PCB Piezotronics, Inc. 3425 Walden Ave. Depew, NY14043 USA Toll-free: (800) 828-8840 24-hour SensorLineSM: (716) 684-0001

Website: www.pcb.com E-mail: info@pcb.com



PCB工业监视和测量设备 - 中国RoHS2公布表

PCB Industrial Monitoring and Measuring Equipment - China RoHS 2 Disclosure Table

	有害物 质					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
住房	0	0	0	0	0	0
PCB板	Х	0	0	0	0	0
电气连接器	0	0	0	0	0	0
压电晶 体	Х	0	0	0	0	0
环氧	0	0	0	0	0	0
铁氟龙	0	0	0	0	0	0
电子	0	0	0	0	0	0
厚膜基板	0	0	Х	0	0	0
电线	0	0	0	0	0	0
电缆	Х	0	0	0	0	0
塑料	0	0	0	0	0	0
焊接	Х	0	0	0	0	0
铜合金/黄铜	Х	0	0	0	0	0

本表格依据 SJ/T 11364 的规定编制。

CHINA RoHS COMPLIANCE

O:表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

X:表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。铅是欧洲RoHS指令2011/65/ EU附件三和附件四目前由于允许的豁免。

Component Name	Hazardous Substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI Compounds (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	0	0	0	0	0	0
PCB Board	Х	0	0	0	0	0
Electrical Connectors	0	0	0	0	0	0
Piezoelectric Crystals	Х	0	0	0	0	0
Ероху	0	0	0	0	0	0
Teflon	0	0	0	0	0	0
Electronics	0	0	0	0	0	0
Thick Film Substrate	0	0	Х	0	0	0
Wires	0	0	0	0	0	0
Cables	Х	0	0	0	0	0
Plastic	0	0	0	0	0	0
Solder	Х	0	0	0	0	0
Copper Alloy/Brass	Х	0	0	0	0	0

This table is prepared in accordance with the provisions of SJ/T 11364.

DOCUMENT NUMBER: 21354
DOCUMENT REVISION: D

ECN: 46162


O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: Indicates that said hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement of GB/T 26572.

Lead is present due to allowed exemption in Annex III or Annex IV of the European RoHS Directive 2011/65/EU.



The Model 691A50 Series Vibration BNC Breakout Boxes

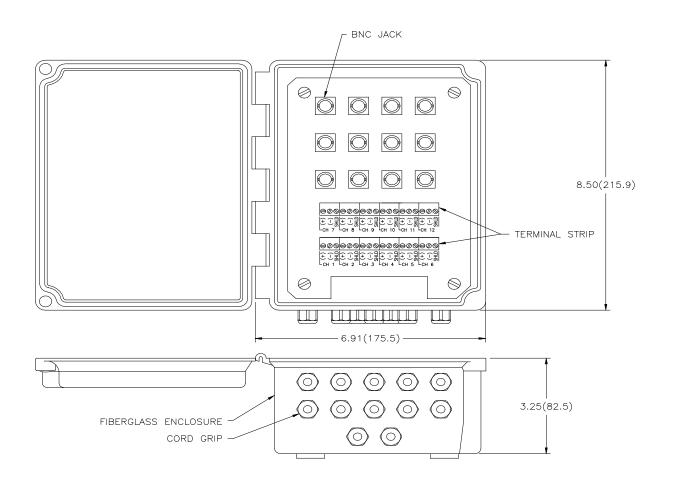

Operating Guide with Enclosed Warranty Information

3425 Walden Avenue, Depew, New York 14043-2495

Phone (716) 684-0003

Fax (716) 684-3823

Toll Free Line 1-800-959-4IMI

MANUAL NUMBER: 18423 MANUAL REVISION: NR







table of contents

Introduction	. page 3
Installation	. page 3

warranty/servicing

See Inserts for Warranty/Servicing Information



introduction

The Model 691A50 Series are Vibration BNC Breakout Boxes that provide terminal strip input with the convenience of BNC outputs. They are used in conjunction with commercially available data collectors and analyzers. They are available in 1 channel to 12 channel units, all housed in a NEMA enclosure. They come standard in a fiberglass, NEMA 4X (IP 66) enclosure with optional painted steel, NEMA 12 (IP65) or stainless steel, NEMA 4X (IP66) enclosure. One cord grip (PGME07) is installed on the bottom of the unit per channel. A few specifications are listed below for easy reference:

Input Connectors	3-Socket Terminal Strip
Output Connectors	BNC Jack
Cable Input	PGME07
Enclosure Type	NEMA 4X (IP66)
Size	8 x 6 x 4 in [203 x 152 x 102 mm]

installation

Establish an easily accessible location for installation and keep in mind that the cabling will be coming from the bottom panel of the enclosure. One PGME07 cord grip is installed for each channel ordered. Use the supplied mounting feet to install the enclosure.

NOTE: The unit has BNC connectors that can be easily contaminated. Install the unit away from sprays, cleaning fluids, steam, excess temperature (above 212°F) and other contaminants. Always keep door closed when not in use.





3425 Walden Avenue, Depew, NY 14043-2495 Phone: (716) 684-0003 • USA Fax: (716) 684-3823 • INTL Fax: (716) 684-4703

ICP ® is a registered trademark of PCB Piezotronics, Incorporated, which uniquely identifies PCB sensors that incorporate built-in microelectronics.

691A50/01		BNC TERMINATI
Performance	ENGLISH	<u>SI</u>
Channels	1	1
Environmental		
Enclosure Rating	Nema 4X	IP66
Temperature Range	-15 to +158 °F	-26 to +70 °C
Physical		
Electrical Connector(Input)	Terminal Block	Terminal Block
Electrical Connector(Output)	BNC Jack	BNC Jack
Cable Input	PGME07	PGME07
Housing Material	Fiberglass	Fiberglass
Size (Height x Width x Depth)	8 in x 6 in x 4 in	203 mm x 152 mm x 102 mm
Weight	2.5 lb	1.14 kg



Model Number

All specifications are at room temperature unless otherwise specified. In the interest of constant product improvement, we reserve the right to change specifications without notice. ICP^{\otimes} is a registered trademark of PCB Group, Inc.

BNC TERMINATION ENCLOSURE

OPTIONAL VERSIONS

5.5 lb

Revision: B

2.5 kg

Optional versions have identical specifications and accessories as listed for the standard mode
except where noted below. More than one option may be used.

 PS - Painted Steel
 [2]

 Enclosure Rating
 IP65
 Nema 12

 Weight
 5.0 lb
 2.3 kg

 SS - Stainless Steel Enclosure
 [2]

 Enclosure Rating
 IP66
 Nema 4X

NOTES:

Weight

- [1] See PCB Declaration of Conformance PS174 for details.
- [2] Mounting kit integral to enclosure.

Entered: LK	Engineer: BAM	Sales: MC	Approved: BAM	Spec Number:
Date: 12/4/2017	Date: 12/4/2017	Date: 12/4/2017	Date: 12/4/2017	11701



Phone: 800-959-4464 Fax: 716-684-3823 E-Mail: imi@pcb.com

